
0


Prepare and mark the sail

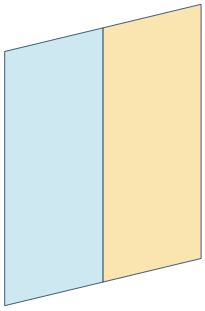

Fold lines: 1.5 in from each long edge

1


Raise the right side panel

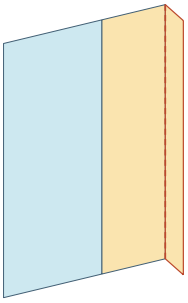

Right panel: 90° toward you

2


Raise the left side panel

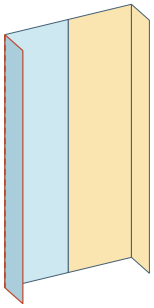

Left panel: 90° toward you

3


Tie the two bridle ends to the spars

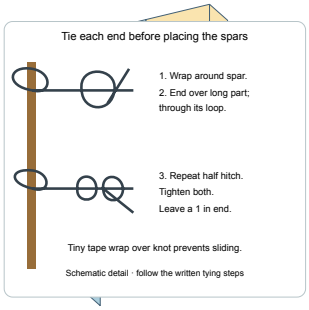

Each spar: two half hitches + tiny tape wrap

4


Tape the right spar onto the front

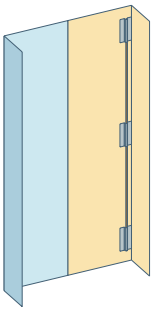

10 in spar · 3 tape patches · tie at 4 in

5


Tape the left spar onto the front

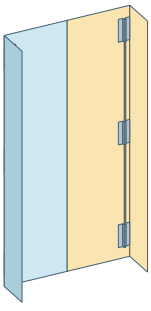

Parallel spars: 5 in apart

6


Measure and tie the central bridle loop

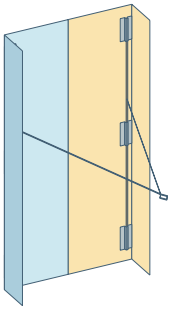

8 in + 8 in free legs · overhand loop knot

7


Attach the flying string

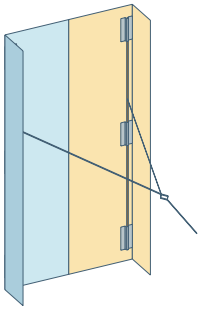

Flying line: two half hitches through loop

8


Tape on both paper tails

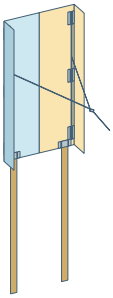

Two 11 in tails · overlap 0.5 in

9

Check the completed kite

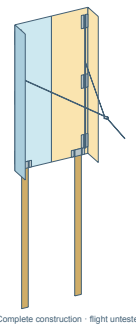

Complete construction · flight untested