
0


Prepare and mark the square

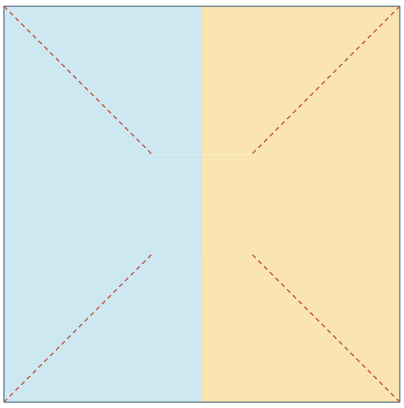

Stop 3/4 in from each center axis

1


Cut four stopped slits

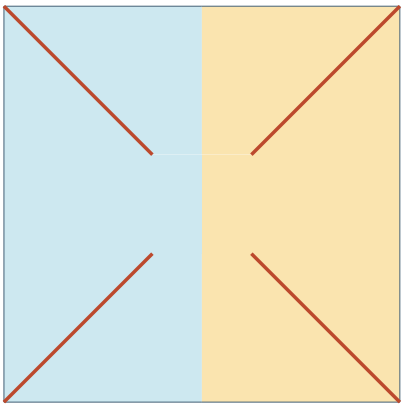

Stop 3/4 in from each center axis


2

Fold the top vane tip

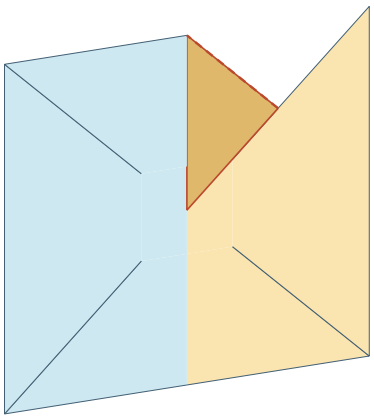


3

Fold the right vane tip

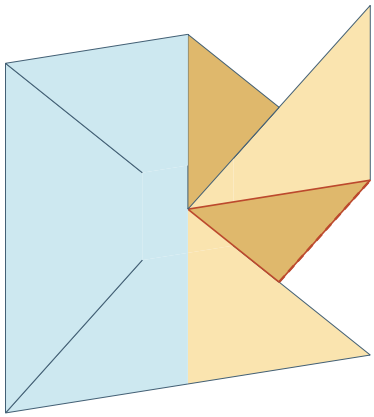


4

Fold the bottom vane tip

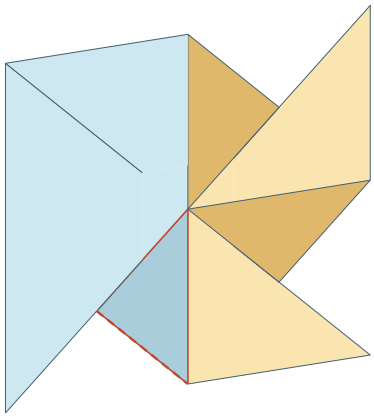


5

Fold the left vane tip

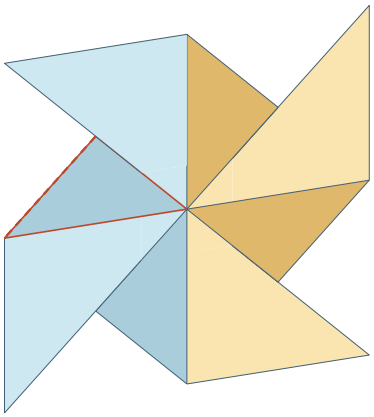

6

Fasten the four tips

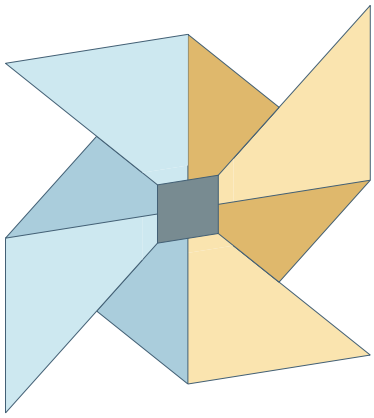

Separate 1 × 1 in tape patch over all four tips